


Basic Wiring Diagram

Servo Motor & Drive Wiring Diagram

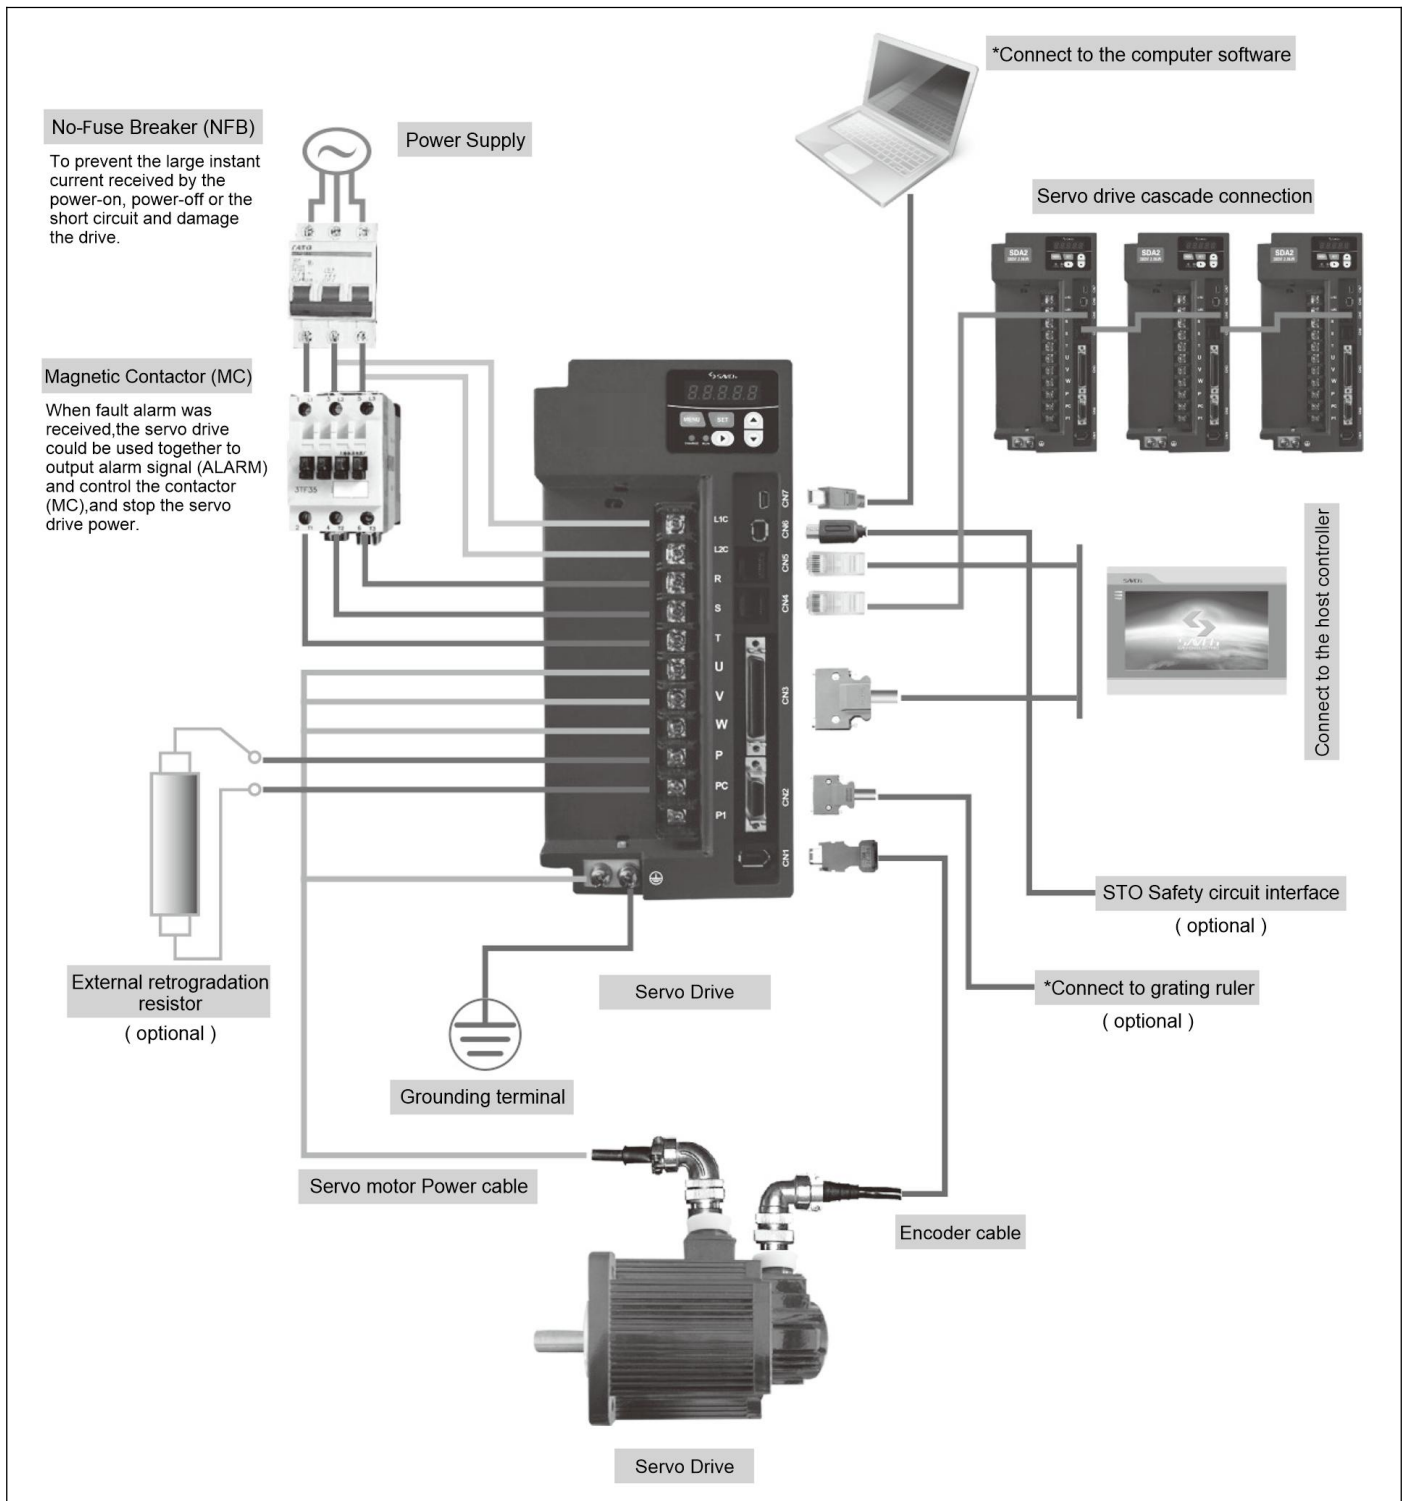

Installation Notes:

1. Check the R, S, T and the L1C ,L2C power and connecting wire.
2. Check the servo motor output U, V, W terminal phase wires (Unable to run when the connection is wrong).
3. External connected regeneration resistor is the selective spare, adopt according to the actual needs.
4. When fault or emergent stop was received, cut the power of magnetic contactor (MC) through ALARM output to stop the power of drive.
5. * indicates being developed.